




WALLMOUNT LAV ROUGH IN 27855.00.000

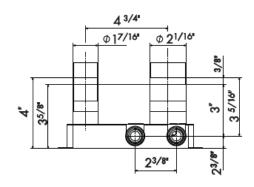

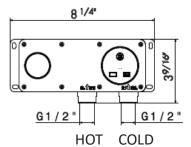





INSTALLATION INSTRUCTIONS:

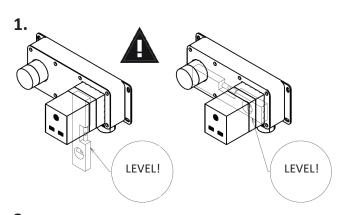





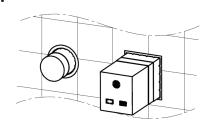

3.

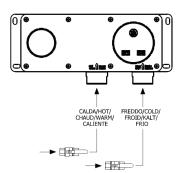

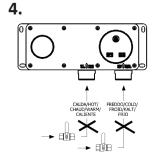

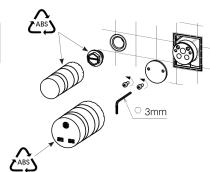

- 1. Comply with built-in restrictions (minimum and maximum) with reference to the wall coating line and level
- 2. Tile paying attention to guarantee system safety by shutting water off
- 3. Test the installation without removing the plastic protection and the caps
- 4. Before removing the plastic protection and the caps, in order to proceed with the assembly of the external parts, be sure that the installation is closed